

Long Range & Wide Area Photoelectric Sensor

PX-2 SERIES






Compact size sensor realizes wide sensing area & long sensing range


Ideal sensing area with very little null zone

The advanced optical system of the **PX-2** series reduces the null zones in front of an automatic guided vehicle (AGV). The null zones at the sides are further minimized if auxiliary sensors which can be easily mounted with connectors are used.
 (For **PX-24**, **PX-24ES**, **PX-23ES** and **PX-26**)

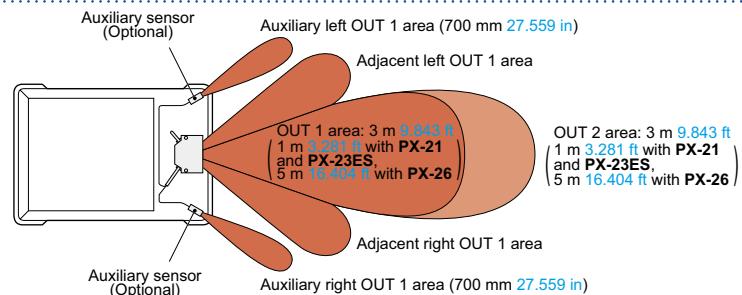

Sensing areas selectable as per route condition

Sensing areas can be selected with switches to suit the route conditions of an AGV. Further, in case of **PX-24ES** and **PX-23ES**, the sensing areas can also be selected with external signals.

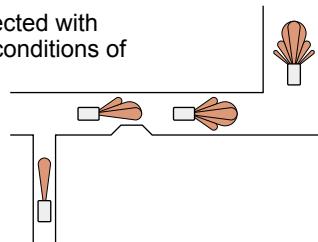

Compact size for space-saving

Its size is half of a conventional model, and the attached cable orientation is freely adjustable. Hence, it can also fit in a small AGV. Moreover, sensitivity adjustment can be done on the front face.



Long sensing range 5 m 16.404 ft type

PX-26 has a long sensing range of 5 m **16.404 ft**. Even on a high-speed AGV, it can detect an object quite early so that slowing down and stopping are smooth.

Automatic interference prevention function

One **PX-2** sensor can simultaneously receive beams from 25 Nos. of other **PX-2** sensors without resulting in any interference. Even if AGVs are facing each other, the **PX-2** sensor on one AGV reliably detects the other AGVs. Hence, it can be safely used even at a place where several AGVs are moving.

Sleep function



The sensor can be put into the sleep (stand-by) condition when it is not used and can be restored to operating condition by an external signal. Consequently battery is conserved as the power consumption is reduced to 1/5.

External sensitivity adjustment

The sensitivity of the sensor can be adjusted, within the range set by the manual adjuster, by an external input.
 (For **PX-24**, **PX-24ES**, **PX-23ES** and **PX-26**)


■ ORDER GUIDE

Main Sensor


| Type | Appearance | Sensing range | Model No. |
|-----------------------------------|---|------------------|----------------|
| Standard type | | 3 m 9.843 ft | PX-22 |
| | | 1 m 3.281 ft | PX-21 |
| Auxiliary sensor connectable type |  | 3 m 9.843 ft | PX-24 |
| | | 1 m 3.281 ft | PX-24ES |
| | | 5 m 16.404 ft | PX-26 |
| Auxiliary sensor |  | 700 mm 27.559 in | PX-SB1 |

Accessories

- **MS-PX-2** (Main sensor mounting bracket)
- **MS-NX5-1** (Auxiliary sensor mounting bracket)

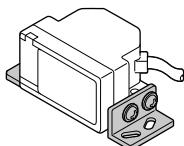

Two bracket set
Four M4 (length 8 mm
0.315 in) screws with
washers are attached.

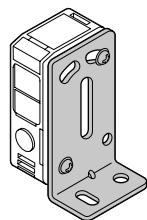


Two M4 (length 25 mm
0.984 in) screws with
washers and two M4 nuts
are attached.

■ OPTIONS

| Designation | Model No. | Description |
|---|-----------------|--|
| Auxiliary sensor mounting bracket | MS-NX5-2 | Foot biangled mounting bracket (Sensor protection bracket) |
| | MS-NX5-3 | Back angled mounting bracket |


Auxiliary sensor mounting bracket

- **MS-NX5-2**

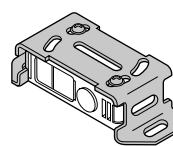

Two M4 (length 25 mm
0.984 in) screws with
washers and two M4 nuts
are attached.

- **MS-NX5-3**

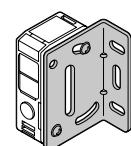

Two M4 (length 25 mm
0.984 in) screws with
washers and two M4 nuts
are attached.

SPECIFICATIONS

Main sensors

| Item | Model No. | Type | Standard model | | Auxiliary sensor connectable model | |
|--|---|---------------------|--|---------------------|---|---------------------|
| | | | Short sensing range | | With external control function | Short sensing range |
| CE marking directive compliance | | | | | | |
| Sensing range (OUT 1 and OUT 2 areas) (Note 2) | 3 m 9.843 ft | 1 m 3.281 ft | 3 m 9.843 ft | 1 m 3.281 ft | 5 m 16.404 ft | |
| Hysteresis (Note 2) | | | | | | |
| Supply voltage | | | 10 to 31 V DC including ripple | | | |
| Power consumption (Note 3) | | | Under operation: 1.5 W or less, Under sleep condition: 0.3 W or less (without auxiliary sensor) | | | |
| OUT1 (OR circuit among the effective center, left, right, adjacent left / right OUT 1 areas and the effective auxiliary left / right areas) | | | NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: 40 V DC or less (between OUT 1 / OUT 2 and 0 V) • Residual voltage: 1.5 V or less (at 100 mA sink current) 0.4 V or less (at 16 mA sink current) | | | |
| OUT2 (OR circuit among the effective center, left and right OUT 2 areas) | | | Utilization category DC-12 or DC-13 | | | |
| Output operation | | | Selectable either Light-ON or Dark-ON with a switch (Output operation of OUT 1 and OUT 2 is the same.) | | | |
| Short-circuit protection | | | Incorporated | | | |
| Extraneous light monitor output | | | NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: 40 V DC or less (between extraneous light monitor output and 0 V) • Residual voltage: 1.5 V or less (at 100 mA sink current) 0.4 V or less (at 16 mA sink current) | | | |
| Output operation | | | ON when modulated beam other than its own (including auxiliary sensor's) light is received | | | |
| Short-circuit protection | | | | | | |
| Response time | | | 80 ms or less | | | |
| Operation indicators | OUT 1 area | | Red LED (lights up when the beam is received in the effective OUT 1 areas) | | | |
| | OUT 2 area | | Yellow LED (lights up when the beam is received in the effective OUT 2 areas) | | | |
| Sensitivity adjuster | | | Continuously variable adjusters (OUT 1, adjacent right OUT 1, adjacent left OUT 1 and OUT 2 areas are adjusted independently.) | | | |
| External sensitivity adjustment function | | | Sensitivity adjustment is possible with an analog input. | | | |
| Sensing area | | | Four sensing areas are selectable with dip switches. | | Four sensing areas are selectable with dip switches, and eight sensing areas are selectable with external inputs. | Fixed |
| Sleep function | | | Operating / sleep selectable with external input | | | |
| Automatic interference prevention function | | | Optical interference from up to 25 units is prevented. | | | |
| Environmental resistance | Pollution degree | | 3 (Industrial environment) | | | |
| | Protection | | IP65 (IEC) | | | |
| | Ambient temperature | | -10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F | | | |
| | Ambient humidity | | 35 to 85 % RH, Storage: 35 to 85 % RH | | | |
| | Ambient illuminance | | Incandescent light: 3,000 lx or less at the light-receiving face | | | |
| | Voltage withstandability | | 1,000 V AC for one min. between all supply terminals connected together and enclosure | | | |
| | Insulation resistance | | 20 MΩ, or more, with 500 V DC megger between all supply terminals connected together and enclosure | | | |
| | Vibration resistance | | 10 to 500 Hz frequency, 3 mm 0.118 in double amplitude (20 G max.) in X, Y and Z directions for two hours each | | | |
| | Shock resistance | | 500 m/s ² acceleration (50 G approx.) in X, Y and Z directions three times each | | | |
| Emitting element | | | Infrared LED (Peak emission wavelength: 950 nm 0.037 mil , modulated) | | | |
| Material | | | Enclosure: ABS, Lens: Acrylic, Cover: Polycarbonate | | | |
| Cable | 0.3 mm ² 5-core cabtyre cable, 0.5 m 1.640 ft long (for input and output) | | For input and output: 0.18 mm ² 9-core (PX-24ES and PX-23ES: 12-core) cabtyre cable, 0.5 m 1.640 ft long For auxiliary sensor connection: 0.18 mm ² 10-core connector attached cabtyre cable, 0.5 m 1.640 ft long | | | |
| Cable extension | | | Extension up to total 100 m 328.084 ft (10 m 32.808 ft for auxiliary sensor connection) is possible with 0.3 mm ² , or more, cable. | | | |
| Weight | | | Net weight: 210 g approx. Gross weight: 390 g approx. | | Net weight: 220 g approx. Gross weight: 400 g approx. | |
| Accessories | MS-PX-2 (Main sensor mounting bracket): 1 set, Adjusting screwdriver: 1 pc., Matrix chart for sensing areas and external inputs: 1 sheet (PX-24ES and PX-23ES only) | | | | | |

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C **+73.4 °F**.

2) The sensing range is specified for white non-glossy paper (300 × 300 mm **11.811 × 11.811 in**) as the object.

3) Obtain the current consumption by the following calculation.

Current consumption = Power consumption + Supply voltage

(e.g.) When the supply voltage is 12 V, the current consumption (operating condition) is: $1.5 \text{ W} \div 12 \text{ V} = 0.125 \text{ A} = 125 \text{ mA}$

SPECIFICATIONS

Auxiliary sensor (Note 2)

| Model No. | PX-SB1 |
|---------------------------------|---|
| Item | |
| CE marking directive compliance | EMC Directive, RoHS Directive |
| Applicable main sensor | PX-24, PX-24ES, PX-23ES or PX-26 |
| Connectable units | Up to two PX-SB1 's can be connected to one main sensor. |
| Sensing range (Note 3) | 700 mm 27.559 in |
| Supply voltage | Supplied from the main sensor |
| Current consumption | Current consumption of the main sensor increases by 30 mA approx. per auxiliary sensor. |
| Output | OR circuit with the main sensor's OUT 1 |
| Operation indicator | Red LED (lights up when the beam is received) |
| Sensitivity adjuster | Continuously variable adjuster |
| Emitting element | Infrared LED (modulated) |
| Material | Polycarbonate |
| Cable | 0.3 mm ² 5-core cabtyre cable, 2 m 6.562 ft long |
| Cable extension | Extension up to total 10 m 32.808 ft is possible with 0.3 mm ² , or more, cable. |
| Weight | Net weight: 130 g approx., Gross weight: 240 g approx |
| Accessories | MS-NX5-1 (Auxiliary sensor mounting bracket): 1 set, Adjusting screwdriver: 1 pc. |

Specifications other than the above are identical with the main sensor.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C [+68 °F](#).


2) The auxiliary sensor cannot be used as a stand-alone unit.

3) The sensing range is specified for white non-glossy paper (300 × 300 mm [11.811 × 11.811 in](#)) as the object.

I/O CIRCUIT AND WIRING DIAGRAMS


PX-24ES PX-23ES

I/O circuit diagram

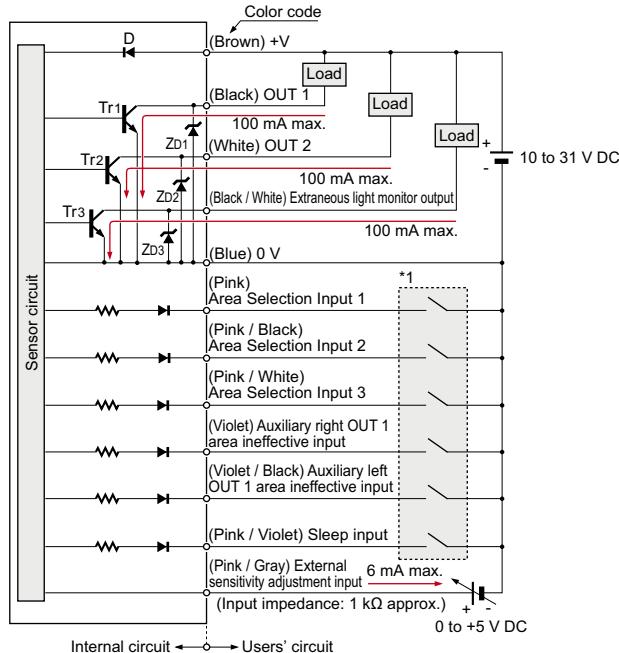


Symbols ... D: Reverse supply polarity protection diode
ZD1, ZD2, ZD3: Surge absorption zener diode
Tr1, Tr2, Tr3 : NPN output transistor

Wiring diagram

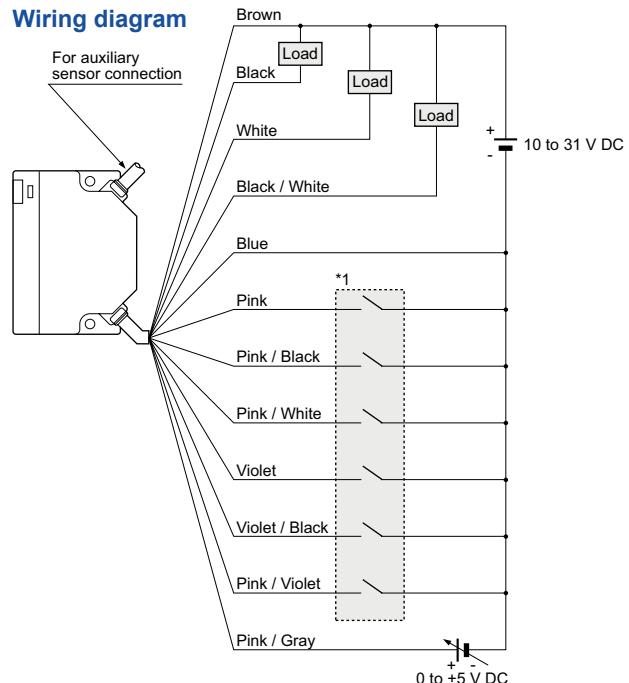

* 1

Non-voltage contact or NPN open-collector transistor




- Area selection input
Low (0 to 1 V): Depends on the logic combination (Refer to p.10)
High (4.5 to 31 V, or open): Depends on the logic combination (Refer to p.10)
- Auxiliary area ineffective input
Low (0 to 1 V): Area ineffective
High (4.5 to 31 V, or open): Area effective
- Sleep input
Low (0 to 1 V): Sleep condition
High [(supply voltage – 1 V) to 31 V, or open]: Operating condition

I/O CIRCUIT AND WIRING DIAGRAMS


PX-22 PX-21

I/O circuit diagram

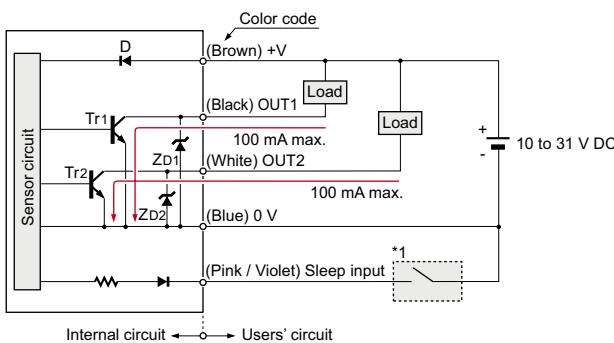


Symbols ... D: Reverse supply polarity protection diode
 ZD1, ZD2: Surge absorption zener diode
 Tr1, Tr2 : NPN output transistor

Wiring diagram

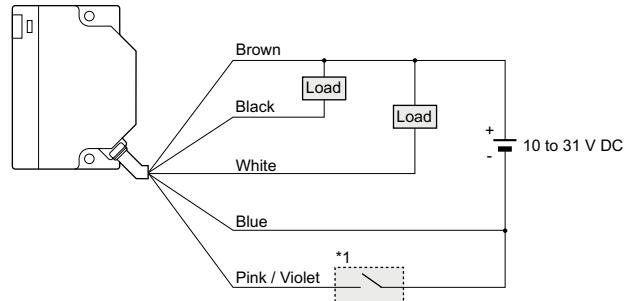

* 1


Non-voltage contact or NPN open-collector transistor



- Sleep input
 Low (0 to 1 V): Sleep condition
 High [(supply voltage – 1 V) to 31 V, or open]: Operating condition


PX-24 PX-26

I/O circuit diagram

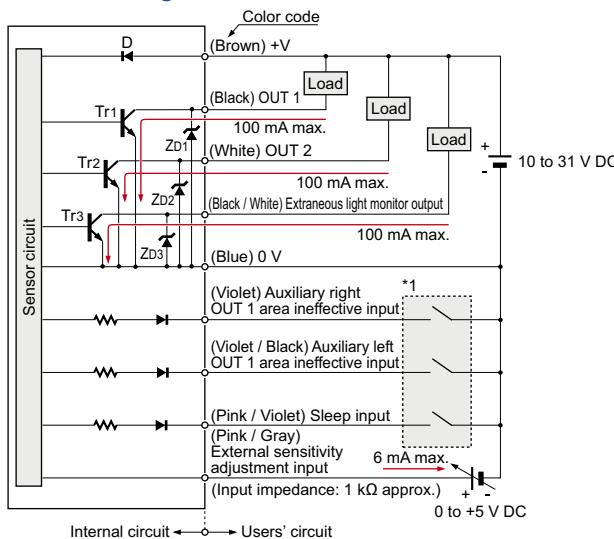


Symbols ... D: Reverse supply polarity protection diode
 ZD1, ZD2, ZD3: Surge absorption zener diode
 Tr1, Tr2, Tr3 : NPN output transistor

Wiring diagram

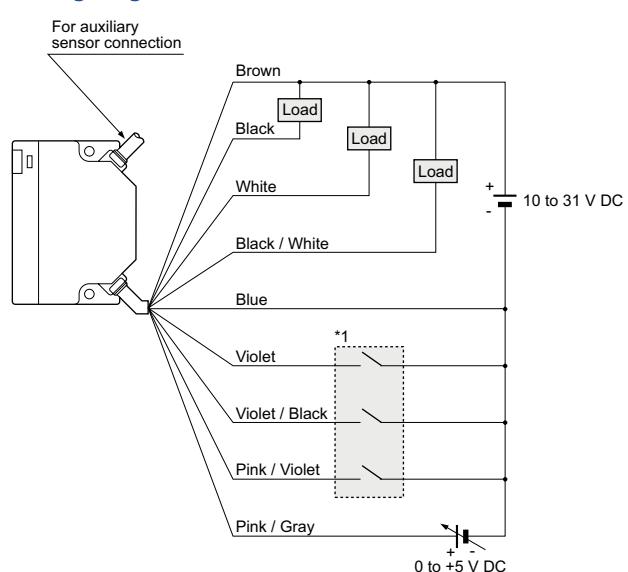

* 1

Non-voltage contact or NPN open-collector transistor




- Auxiliary area ineffective input
 Low (0 to 1 V): Area ineffective
 High (4.5 to 31 V, or open): Area effective
- Sleep input
 Low (0 to 1 V): Sleep condition
 High [(supply voltage – 1 V) to 31 V, or open]: Operating condition

SENSING CHARACTERISTICS (TYPICAL)

How to read sensing characteristics


• Sensing field

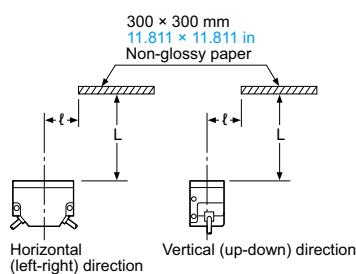


Note: The sensitivity has been adjusted so that the maximum sensing range for white non-glossy paper (300 x 300 mm 11.811 x 11.811 in) is 3 m 9.843 ft (1 m 3.281 ft for PX-21 and PX-23ES, 5 m 16.404 ft for PX-26) with the L., C. and R. areas effective.

Sensing area

L : Left area
C : Center area
R : Right area
L' : Adjacent left OUT 1 area
R' : Adjacent right OUT 1 area



• Correlation between external sensitivity adjustment input voltage and sensing range

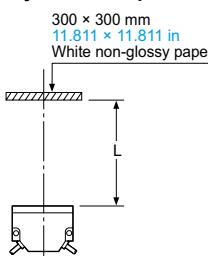

It shows the variation in the sensing range when the external input voltage is changed from 0 to +5 V with the sensitivity adjuster set at the maximum sensing range.

Sensing object

Type of non-glossy paper


- White non-glossy paper (lightness: 9)
- Gray non-glossy paper (lightness: 5)
- Black non-glossy paper (lightness: 2)

• Correlation between sensitivity adjuster and sensing range

Please note that due to the adjuster's characteristics it may be difficult to adjust the sensitivity at a close distance or near to rated sensing distances. (Refer to "Correlation between sensitivity adjuster and sensing range" below.)

All models


Correlation between setting distance and excess gain

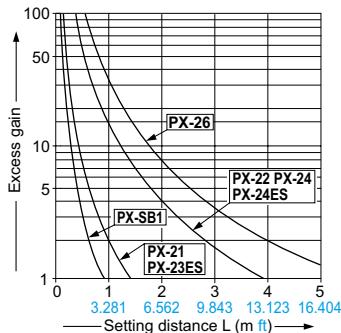


PX-22 PX-24 PX-24ES

Sensing fields


• All areas effective (Horizontal)

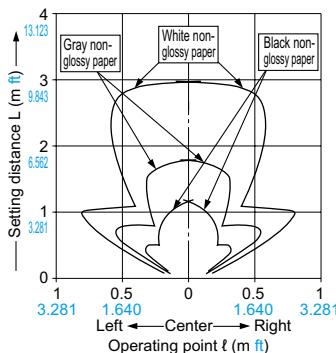


• C. area effective (Horizontal)

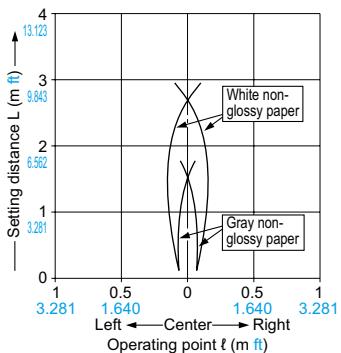

• All areas effective (Vertical)


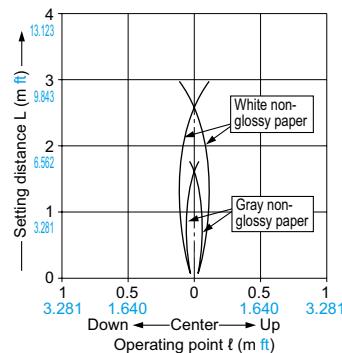


Correlation between external sensitivity adjustment input voltage and sensing range (Excluding PX-22)


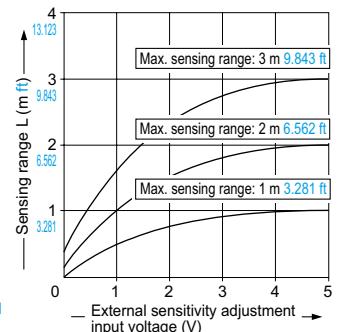


Correlation between sensitivity adjuster and sensing range

• OUT1(OUT2) area

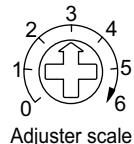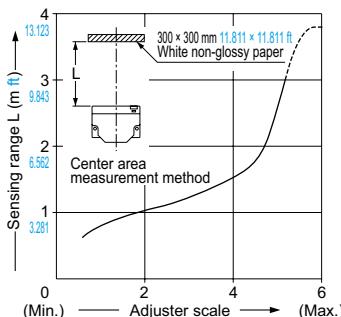

• Adjacent right (left) OUT1 area

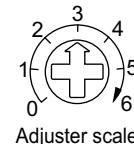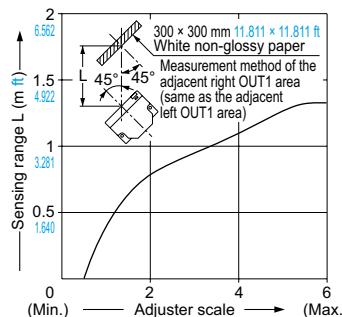


SENSING CHARACTERISTICS (TYPICAL)


PX-21 PX-23ES

Sensing fields


- All areas effective (Horizontal)

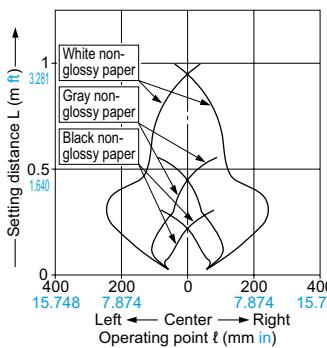


- C. area effective (Horizontal)

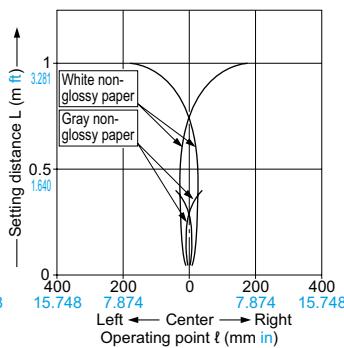

- All areas effective (Vertical)


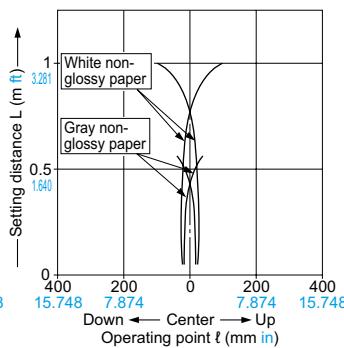


Correlation between external sensitivity adjustment input voltage and sensing range (PX-23ES only)


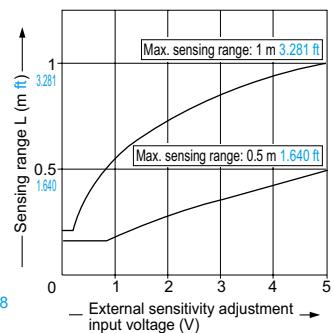


Correlation between sensitivity adjuster and sensing range

- OUT1 (OUT2) area

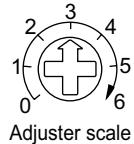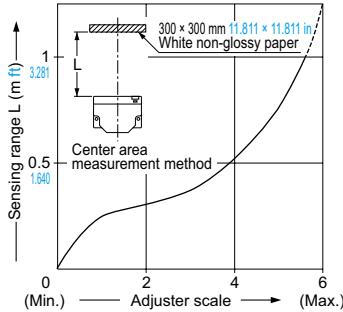


- Adjacent right (left) OUT1 area

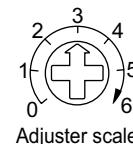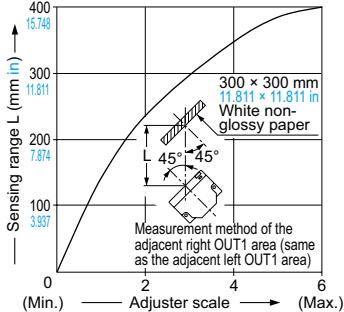


PX-26

Sensing fields

- Horizontal [All areas effective (Note)]

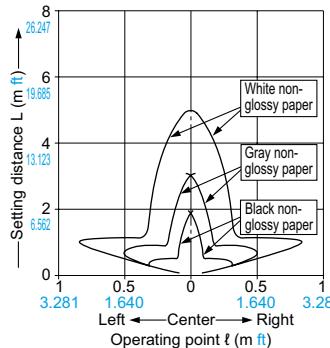



- Vertical [All areas effective (Note)]

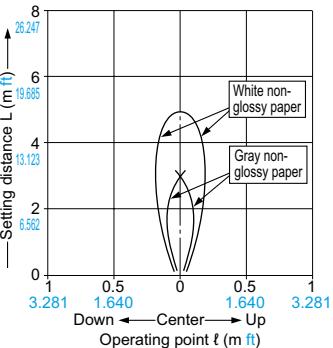


Note: Area selection is not possible.

Correlation between sensitivity adjuster and sensing range



- OUT1 (OUT2) area

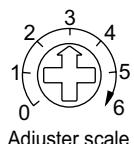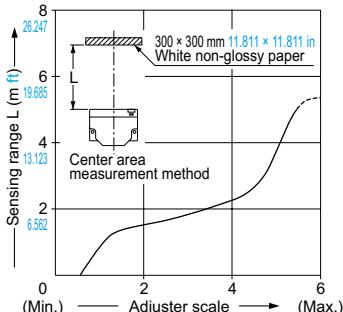

- Correlation between external sensitivity adjustment input voltage and sensing range

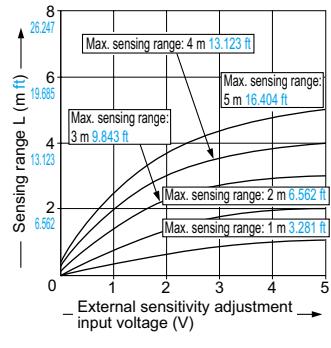

- Adjacent right (left) OUT1 area

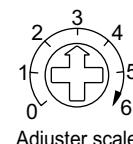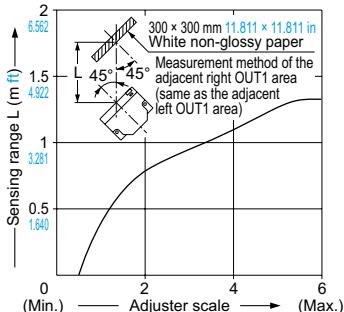


SENSING CHARACTERISTICS (TYPICAL)

PX-SB1

Sensing field

- Horizontal and vertical directions

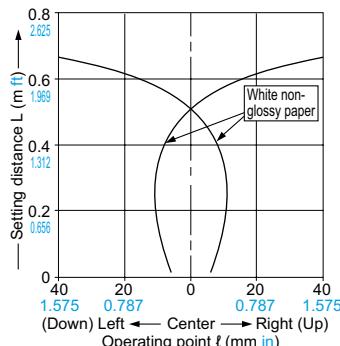

PRECAUTIONS FOR PROPER USE

All models



- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

Hazard Indications

In this catalog, **WARNING** and **CAUTION** are indicated depending upon the level of danger. Please observe them strictly for the safe use of this sensor.



'WARNING' indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.



'CAUTION' indicates a hazardous situation that, if not avoided, may result in minor or moderate injury. Further, they also indicate the condition of risk of physical damage to machinery.



• Installation of a touch bumper

You are requested to always install a touch bumper when this product is used on an automatic guided vehicle (AGV).



• Use outside Japan

This sensor conforms to the EMC Directive. However, it is not certified by a competent body in accordance with other country safety standards. Since each country has its regulations, please follow the local and national regulations of the country where this sensor is used.



• Fail-safe measures

This sensor is meant for proximity detection and does not possess control functions for safety maintenance. If fail-safe measures are required, consider their incorporation in the total system.

Further, do not connect the sensor output directly to a stopping mechanism (brake).


CAUTION

• Periodical maintenance check


The person in charge must periodically confirm the performance of the product and maintain a record of such checks. In addition, whenever the operating environment of the product is changed due to system modification, etc., performance check must be done.

Mounting


- The tightening torque for the main sensor should be 1.2 N·m or less.

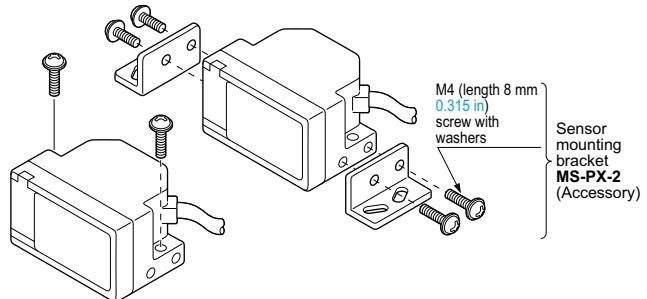

- The tightening torque for **PX-SB1** (auxiliary sensor) should be 0.8 N·m or less.

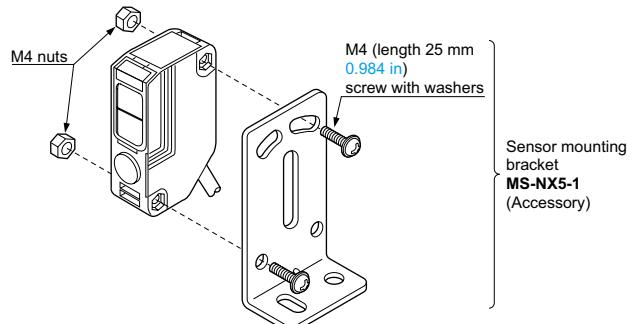

- Mount the sensor, horizontally, at least 300 mm **11.811 in** above the floor, to avoid reflection from the floor.

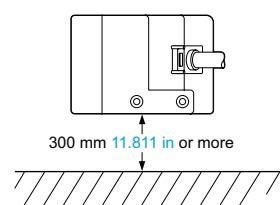


PRECAUTIONS FOR PROPER USE

All models

Automatic interference prevention function

- In case several sensors are used at the same place, take care that the number of sensors from which beams may be simultaneously incident is 25 sensors or less.

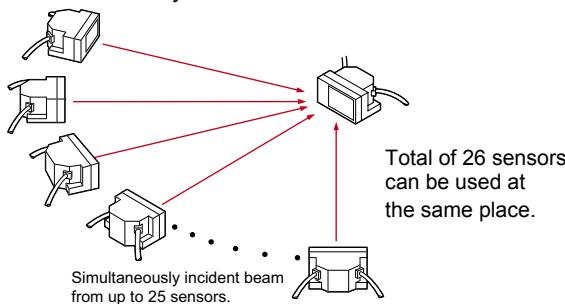


Sleep function

- When the sleep input is made Low, the sensor goes into the sleep state and the operation can be stopped.

Notes: 1) Response time of the sleep input is 50ms.

- Reactivation from the sleep state to the operation state takes 0.7 sec. approx. Operation during this transient state should be avoided.
- When the sleep function is not used, keep the sleep input wire open or insulated and prevent contact with other wires.

Part description

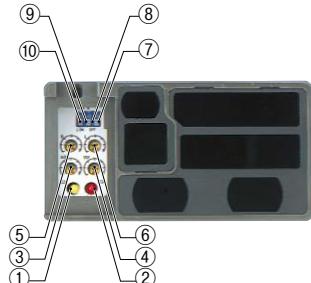

| Sign | Item | Description |
|------|---|---|
| ① | Operation indicator | OUT 2 area (Yellow LED) Lights up when the beam is received in the OUT 2 area. |
| ② | | OUT 1 area (Red LED) Lights up when the beam is received in the OUT 1 area. |
| ③ | | OUT 2 area |
| ④ | | OUT 1 area |
| ⑤ | Sensitivity adjuster | Adjacent left OUT 1 area OUT 1 area Adjacent right OUT 1 area Adjacent left OUT 1 area |
| ⑥ | | OUT 2 area Adjacent right OUT 1 area |
| ⑦ | Sensing area selection switch (Note 1) | Left area Selection of main sensor sensing areas. (OUT 1, OUT 2) Left area center area Right area R L OFF Effective R L OFF Ineffective |
| ⑧ | | Right area |
| ⑨ | Output operation mode selection switch | Select the operation mode for OUT 1 and OUT 2 with the operation mode selection switch. D.ON L.ON D.ON L.ON Light-ON Dark-ON |
| ⑩ | External control function selection switch (Note 2) | Select whether to perform selection of sensing area with the dipswitch or by external input. INT. EXT. INT. EXT. Dipswitches External inputs |

Notes: 1) Not incorporated in PX-26.

2) Incorporated in PX-24ES and PX-23ES.

Others

- Do not use during the initial transient time (0.7 sec.) after the power supply is switched on.
- Take care that an initial rush current (1.5 A approx. at 10 V DC and 5 A approx. at 31 V DC) will flow when the power supply is switched on.

PX-22 PX-21 PX-24 PX-24ES PX-23ES

Selection of sensing area

| Setting method | Internal settings INT. EXT. | Area selection input (Note) (PX-24ES and PX-23ES only) | | |
|---|-----------------------------------|---|---------|---------|
| | | Input 1 | Input 2 | Input 3 |
| Sensing area | | | | |
| All areas ineffective | | — | L | L |
| Center area effective | | | H | L |
| Center, right and adjacent right OUT 1 areas effective | | | L | H |
| Center left and adjacent left OUT 1 areas effective | | | H | H |
| Center and left / right adjacent OUT 1 areas effective | R L OFF | L | L | H |
| Center, right and adjacent left / right OUT 1 areas effective | R L OFF | H | L | H |
| Center, left and adjacent left / right OUT 1 areas effective | R L OFF | L | H | H |
| All areas effective | R L OFF | H | H | H |

L: Low (0 to 1V), H: High (4.5 to 31 V, or open)

Note: Response time of area selection input is 80 ms.

■ PRECAUTIONS FOR PROPER USE

PX-24 PX-24ES PX-23ES PX-26

External sensitivity adjustment function

- The sensitivity can be adjusted, within the range set by the manual sensitivity adjuster, by an analog voltage (0 to +5 V) applied to the external sensitivity adjustment input. The sensitivity varies with the magnitude of the applied voltage.

Notes: 1) The sensitivity of the auxiliary sensor is not changed.
2) Sensitivity adjustment beyond the range set by the manual sensitivity adjuster is not possible.


| | |
|---------------|---|
| Input voltage | 0 V ← → +5 V or open |
| Sensitivity | Minimum ← → Maximum (Maximum sensitivity set by the manual sensitivity adjuster) |

3) This wire should be insulated if it is not used.

Extraneous light monitor function

(Not incorporated in **PX-22** and **PX-21**)

- If the sensor receives modulated light other than its own (including auxiliary sensor's) light, the extraneous light monitor output turns ON. The operation of the extraneous light monitor output has absolutely no affect on sensing. It is useful for recognizing presence of other sensors near this sensor in case of intersecting AGV paths, etc.

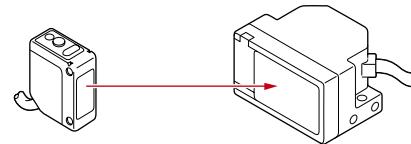

Note: The extraneous light monitor output is not incorporated with a short-circuit protection circuit. Do not connect it directly to a power supply or a capacitive load.

PX-SB1

- This sensor must always be used with the applicable main sensor. This sensor does not work as a standalone unit. (It cannot be used with **PX-22** or **PX-21**.)

Selection of auxiliary area

- Aux area can be selected by aux area ineffective input of the main sensor.

| Ineffective input Sensing area | Auxiliary left OUT 1 area | Auxiliary right OUT 1 area |
|---|------------------------------|-------------------------------|
| Auxiliary left / right OUT 1 area ineffective | L | L |
| Auxiliary left OUT 1 area effective | H | L |
| Auxiliary right OUT 1 area effective | L | H |
| Auxiliary left / right OUT 1 area effective | H | H |


L: Low (0 to 1 V), H: High (4.5 to 31 V or open)

Note: Aux area disable input has nothing to do with the external control function selection switch of the main sensor.

Sensitivity setting

- Sensitivity adjustment of **PX-SB1** is performed with the emitter volume. If sensitivity cannot be set to close range even after adjusting the emitter volume, then an aux sensor might be receiving the light from the main sensor. If that is the case, adjust sensitivity with the emitter volume and the receiver volume. For details, see the instruction manual that comes with the product.

Connection with the main sensor

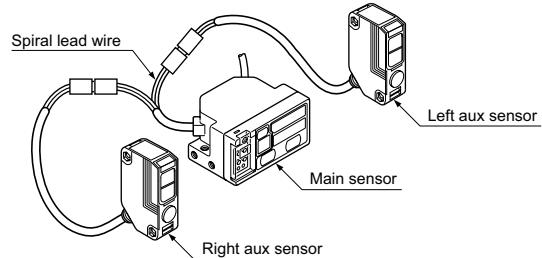


- Connect the main sensor connector attached cable to the aux sensor connector attached cable.
- The spiral lead wire side of the main sensor connector attached cable is the left aux sensor side.

DIMENSIONS (Unit: mm in)


The CAD data can be downloaded from our website.

PX-2□

Main sensor

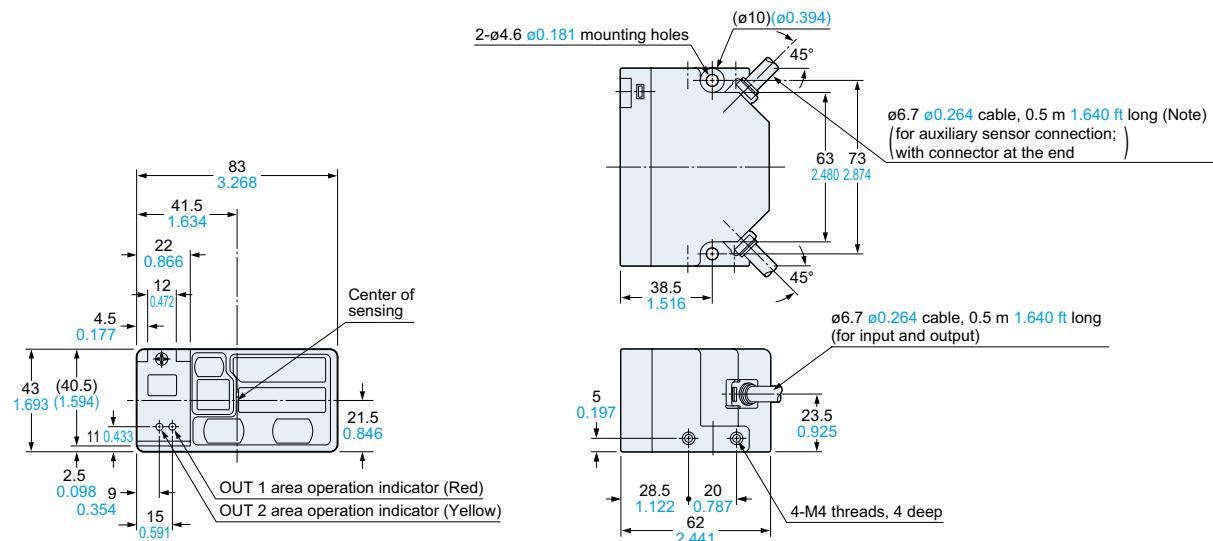Note: **PX-22** and **PX-21** do not have this cable.**PX-SB1**


Auxiliary sensor

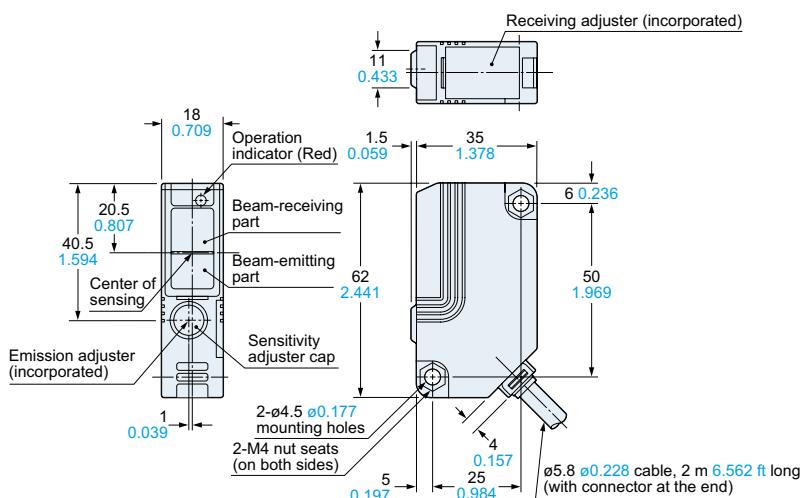

DIMENSIONS (Unit: mm in)


The CAD data can be downloaded from our website.

MS-PX-2

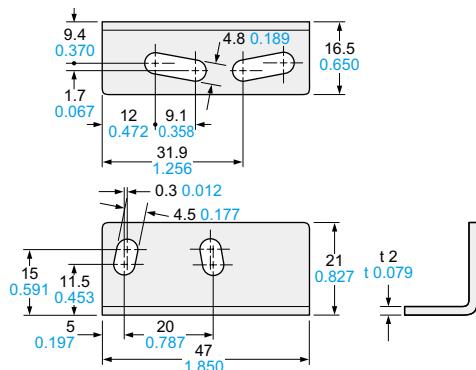

Left side

Main sensor mounting bracket (Accessory for **PX-2**)

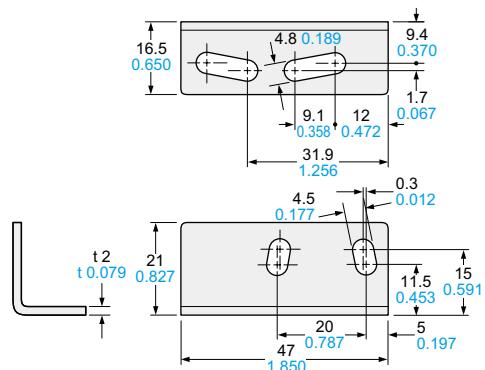


Right side

Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)

Four M4 (length 8 mm 0.315 in) screws with washers are attached.


Assembly dimensions

Mounting drawing with **PX-24**


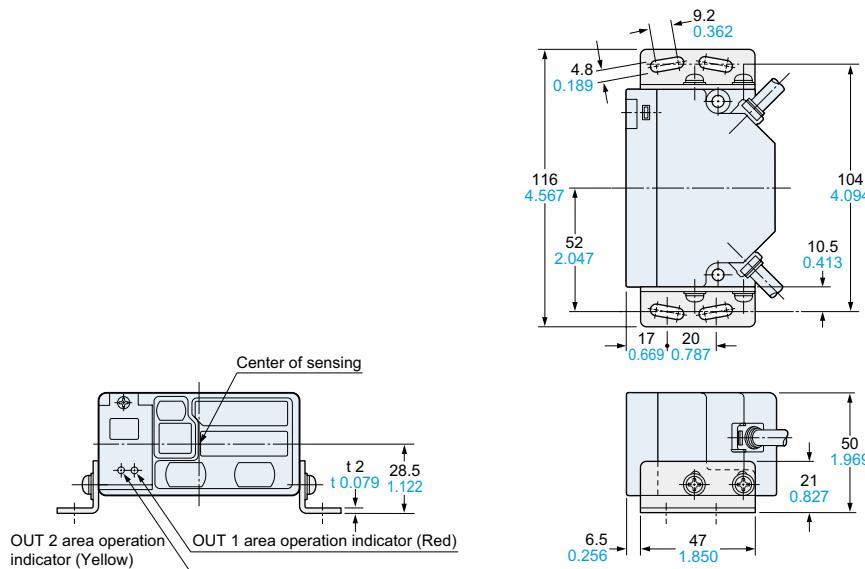


DIMENSIONS (Unit: mm in)

The CAD data can be downloaded from our website.


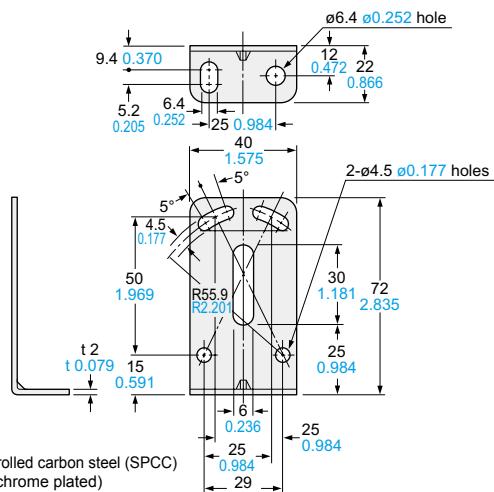
MS-NX5-1Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)Two M4 (length 25 mm 0.984 in)
screws with washers and two M4 nuts are attached.Auxiliary sensor mounting bracket (Accessory for **PX-SB1**)

Assembly dimensions

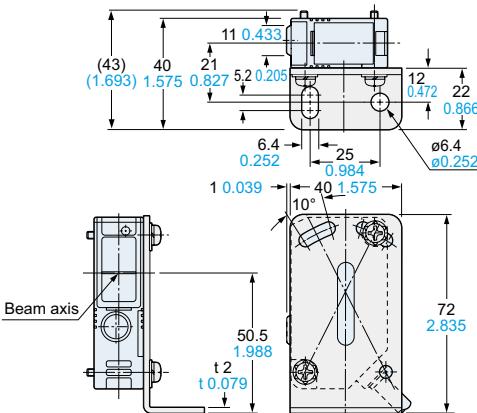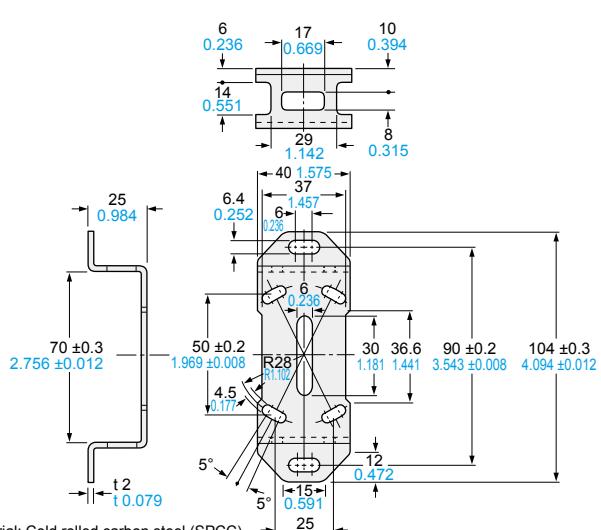**MS-NX5-2**Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)Two M4 (length 25 mm 0.984 in)
screws with washers and
two M4 nuts are attached.


Auxiliary sensor mounting bracket (Optional)

Assembly dimensions

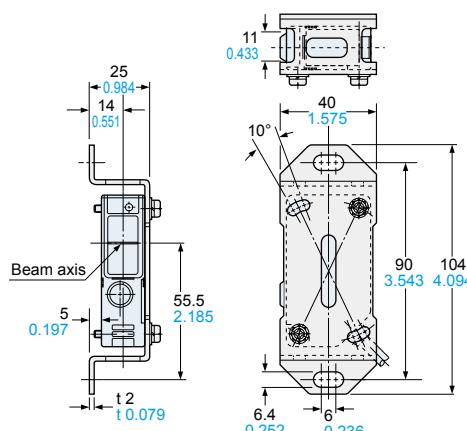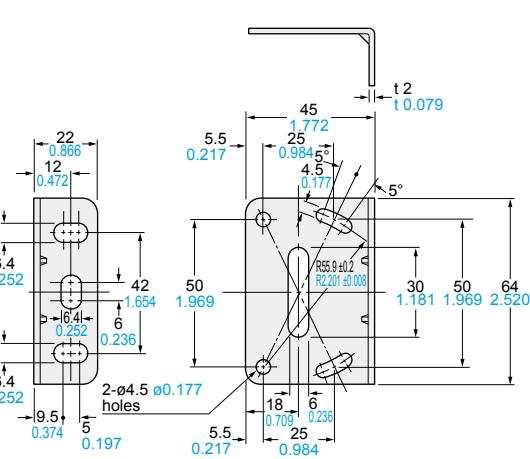**MS-NX5-3**Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)Two M4 (length 25 mm 0.984 in)
screws with washers and
two M4 nuts are attached.

Auxiliary sensor mounting bracket (Optional)

Assembly dimensions

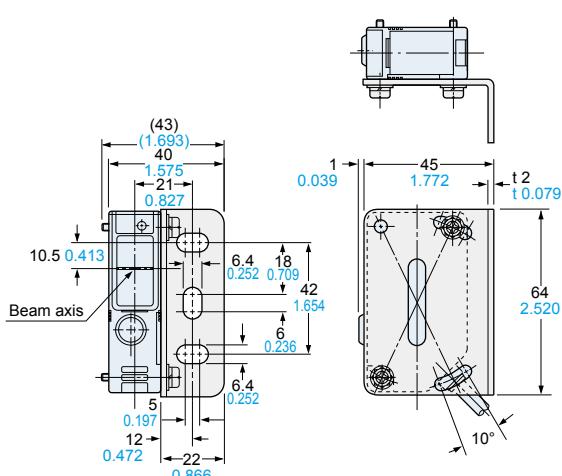

Disclaimer

The applications described in the catalog are all intended for examples only. The purchase of our products described in the catalog shall not be regarded as granting of a license to use our products in the described applications. We do NOT warrant that we have obtained some intellectual properties, such as patent rights, with respect to such applications, or that the described applications may not infringe any intellectual property rights, such as patent rights, of a third party.

Panasonic
INDUSTRY

Panasonic Industry Co., Ltd.
Industrial Device Business Division
7-1-1, Morofuku, Daito-shi, Osaka 574-0044, Japan
industrial.panasonic.com/ac/e/